



## Sing KARAOKE (TOP interface)

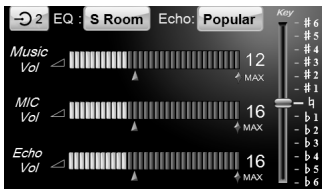

- #: Press up to increase the tone.
- b: Press down to decrease the tone.
- ↵: Return to the natural tone.
- ◀: (Press) Change the EQ mode S Room → M Room → L Room → S hall → M Hall → L Hall → S Room..... (Press for 7 seconds) Enter into the Setting interface.
- ▶: Change the Echo mode Popular → Ballade → Professional → Rock → Vintage → Old BMB → Popular .....


## Change the Settings (Setting interface)

[Setting TOP interface]

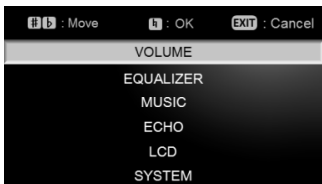

- #: Press up to select the functional.
- b: Press down to select the functional.
- ↵: Enter into the selected functional setting interface.
- EXIT: Return to the TOP interface.


[Initial volume and maximum volume]

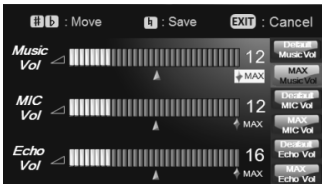

- #: Press up (The selected volume is highlighted.)
- b: Press down (The selected volume is highlighted.)
- ↵: Save the current settings and return to the Setting TOP interface.
- EXIT: Return to the Setting TOP interface without saving the current settings.


\* To adjust the each volume, turn the corresponding Knobs on the Front Panel. You can adjust the volume while listening to the sound.

[Equalizer]

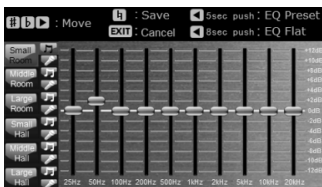


- #: Press up (The selected equalizer is highlighted.)
- b: Press down (The selected equalizer is highlighted.)
- ◀: (Press for 5 seconds) Return the settings of the selected equalizer to the factory default setting. (Press for 8 seconds) All the settings of the selected equalizer will be back to 0.
- ▶: Select the frequency range.
- ↵: Save the current settings and return to the Setting TOP interface.
- EXIT: Return to the Setting TOP screen without saving the current settings.

Frequency ranges of equalizer

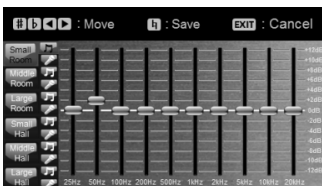

- #: Press up (The selected equalizer is highlighted.)
- b: Press down (The selected equalizer is highlighted.)
- ◀: Select the frequency ranges (The frequency range is decreased.) At 25Hz, if continuously pressing the key, the interface will return to the Equalizer Setting interface.
- ▶: Select the frequency ranges (The frequency range is increased.)
- ↵: Save the current settings and return to the Setting TOP interface.
- EXIT: Return to the Setting TOP interface without saving the current settings.

[Music] Change the setting mode with the ◀ and ▶ keys (The selected mode is highlighted.)

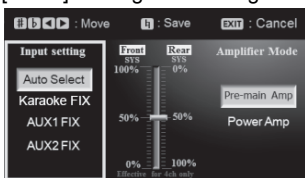

- (Input setting)
- #: Press up to select the Input mode.
- b: Press down to select the Input mode.

Auto Select: Automatically select the input mode.  
Karaoke FIX: Fix at Karaoke input mode.  
AUX1 FIX: Fix at AUX1 input mode.  
AUX2 FIX: Fix at AUX2 input mode.



- (Front System-Rear System balance adjustment) **4ch mode only**
- #: Increases the Front system percentage.
- b: Increases the Rear system percentage.




- (Amplifier Mode)
- #: Press up to select the Amplifier mode.
- b: Press down to select the Amplifier mode.

Pre-main Amp: Select Pre-main Amp mode.  
Power Amp: Select Power Amp mode.

\* When Power Amp is selected, the Equalizer, Echo and Microphone functions are not available. Only the music volume can be adjusted.

## Change the Settings (Setting interface) Continued


[Echo] Change the setting mode with the ◀ and ▶ keys (The selected mode is highlighted.)

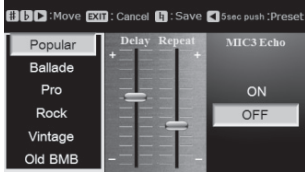

(Echo Mode)  
#: Press up to select the Echo mode.  
b: Press down to select the Echo mode.


Switch the options as follows:  
Popular → Ballade → Pro → Rock → Vintage → Old BMB → Popular.....

▶ key ↓ ↑ ◀ key

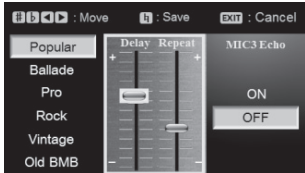

(Delay & Repeat)  
#: Increases the Delay (Repeat) amount.  
b: Decreases the Delay (Repeat) amount.  
\* Select Delay and Repeat with the ◀ and ▶ keys.

▶ key ↓ ↑ ◀ key

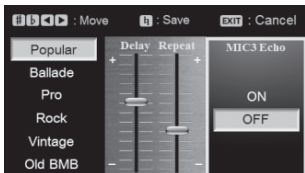


(MIC 3 Echo)  
#: MIC 3 Echo on.  
b: MIC 3 Echo off.

ON: Turn the MIC 3 Echo on.  
OFF: Turn the MIC 3 Echo off.

\* MIC 3 Echo off is a special mode for easily listening the voice of the MC.


[LCD] Change the setting mode with the ◀ and ▶ keys (The selected mode is highlighted.)

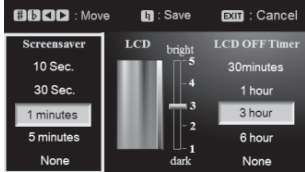

(Screen saver)  
#: Press up to select the screen saver time.  
b: Press down to select the screen saver time.


Switch the options as follows:  
10 Sec. ↔ 30 Sec. ↔ 1 minutes ↔ 5 minutes ↔ None

▶ key ↓ ↑ ◀ key

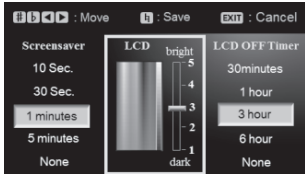

(LCD)  
#: Brightens the LCD.  
b: Darkens the LCD.


▶ key ↓ ↑ ◀ key

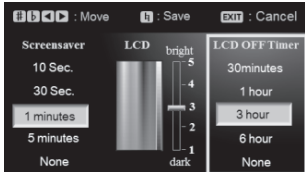

(LCD OFF Timer)  
#: Press up to select the LCD OFF time.  
b: Press down to select the LCD OFF time.


Switch the options as follows:  
30 minutes ↔ 1 hour ↔ 3 hour ↔ 6 hour ↔ None

[SYSTEM] Change the setting mode with the ◀ and ▶ keys (The selected mode is highlighted.)

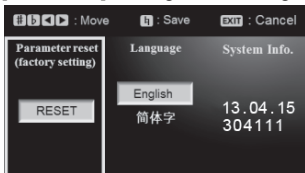

(Reset the settings to the factory default)  
#: Act the reset and all the settings return to the factory default settings.  
EXIT: Return to the Setting TOP interface without any change.

▶ key ↓ ↑ ◀ key

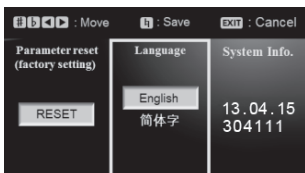

(Language)  
#: Select English.  
b: Select Chinese.  
\* After selecting the language, press the ⌘ key to apply the change.



← This number shows the current software version in the machine, which is required for maintenance.

### (Cautions)

**All the settings will be lost after this operation.**

**Use caution.**